


**These Leveling Spacers will net you 2" of lift**


Drilled and tapped for 10mm metric bolt. They don't have to go all the way through.

.25" Bolting surface for studs from coil

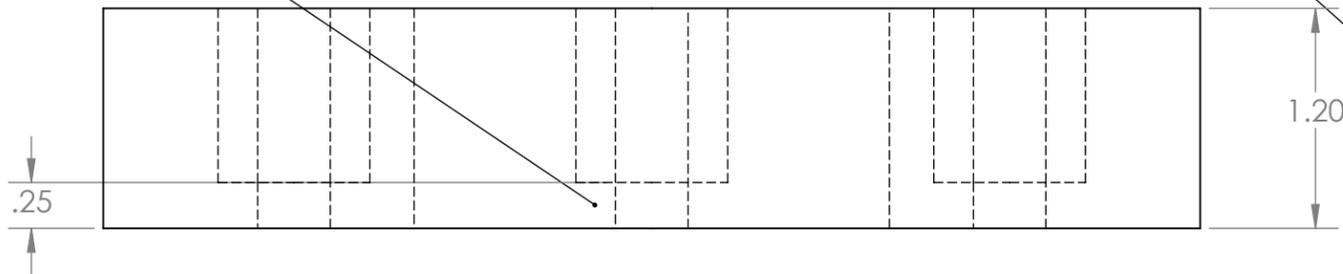


New bolts to attach spacer + coil assembly to coil bucket.

Existing coil studs protrude through here.

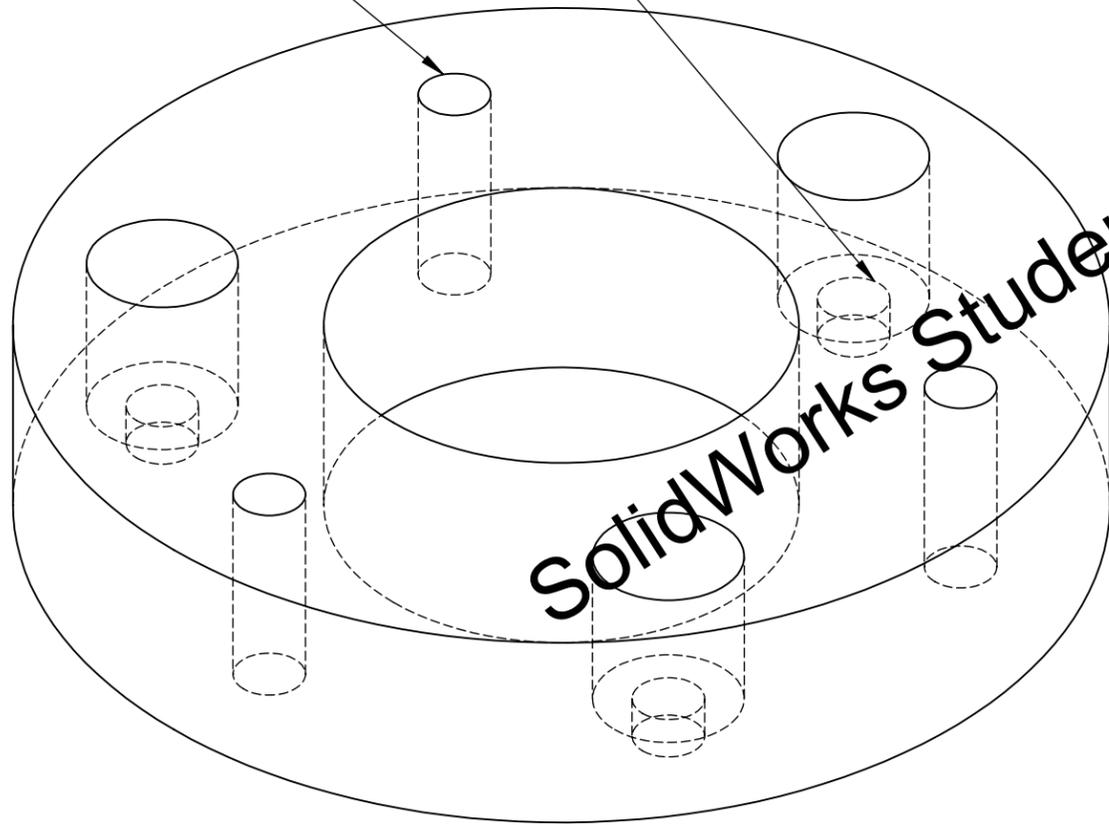

All units in inches

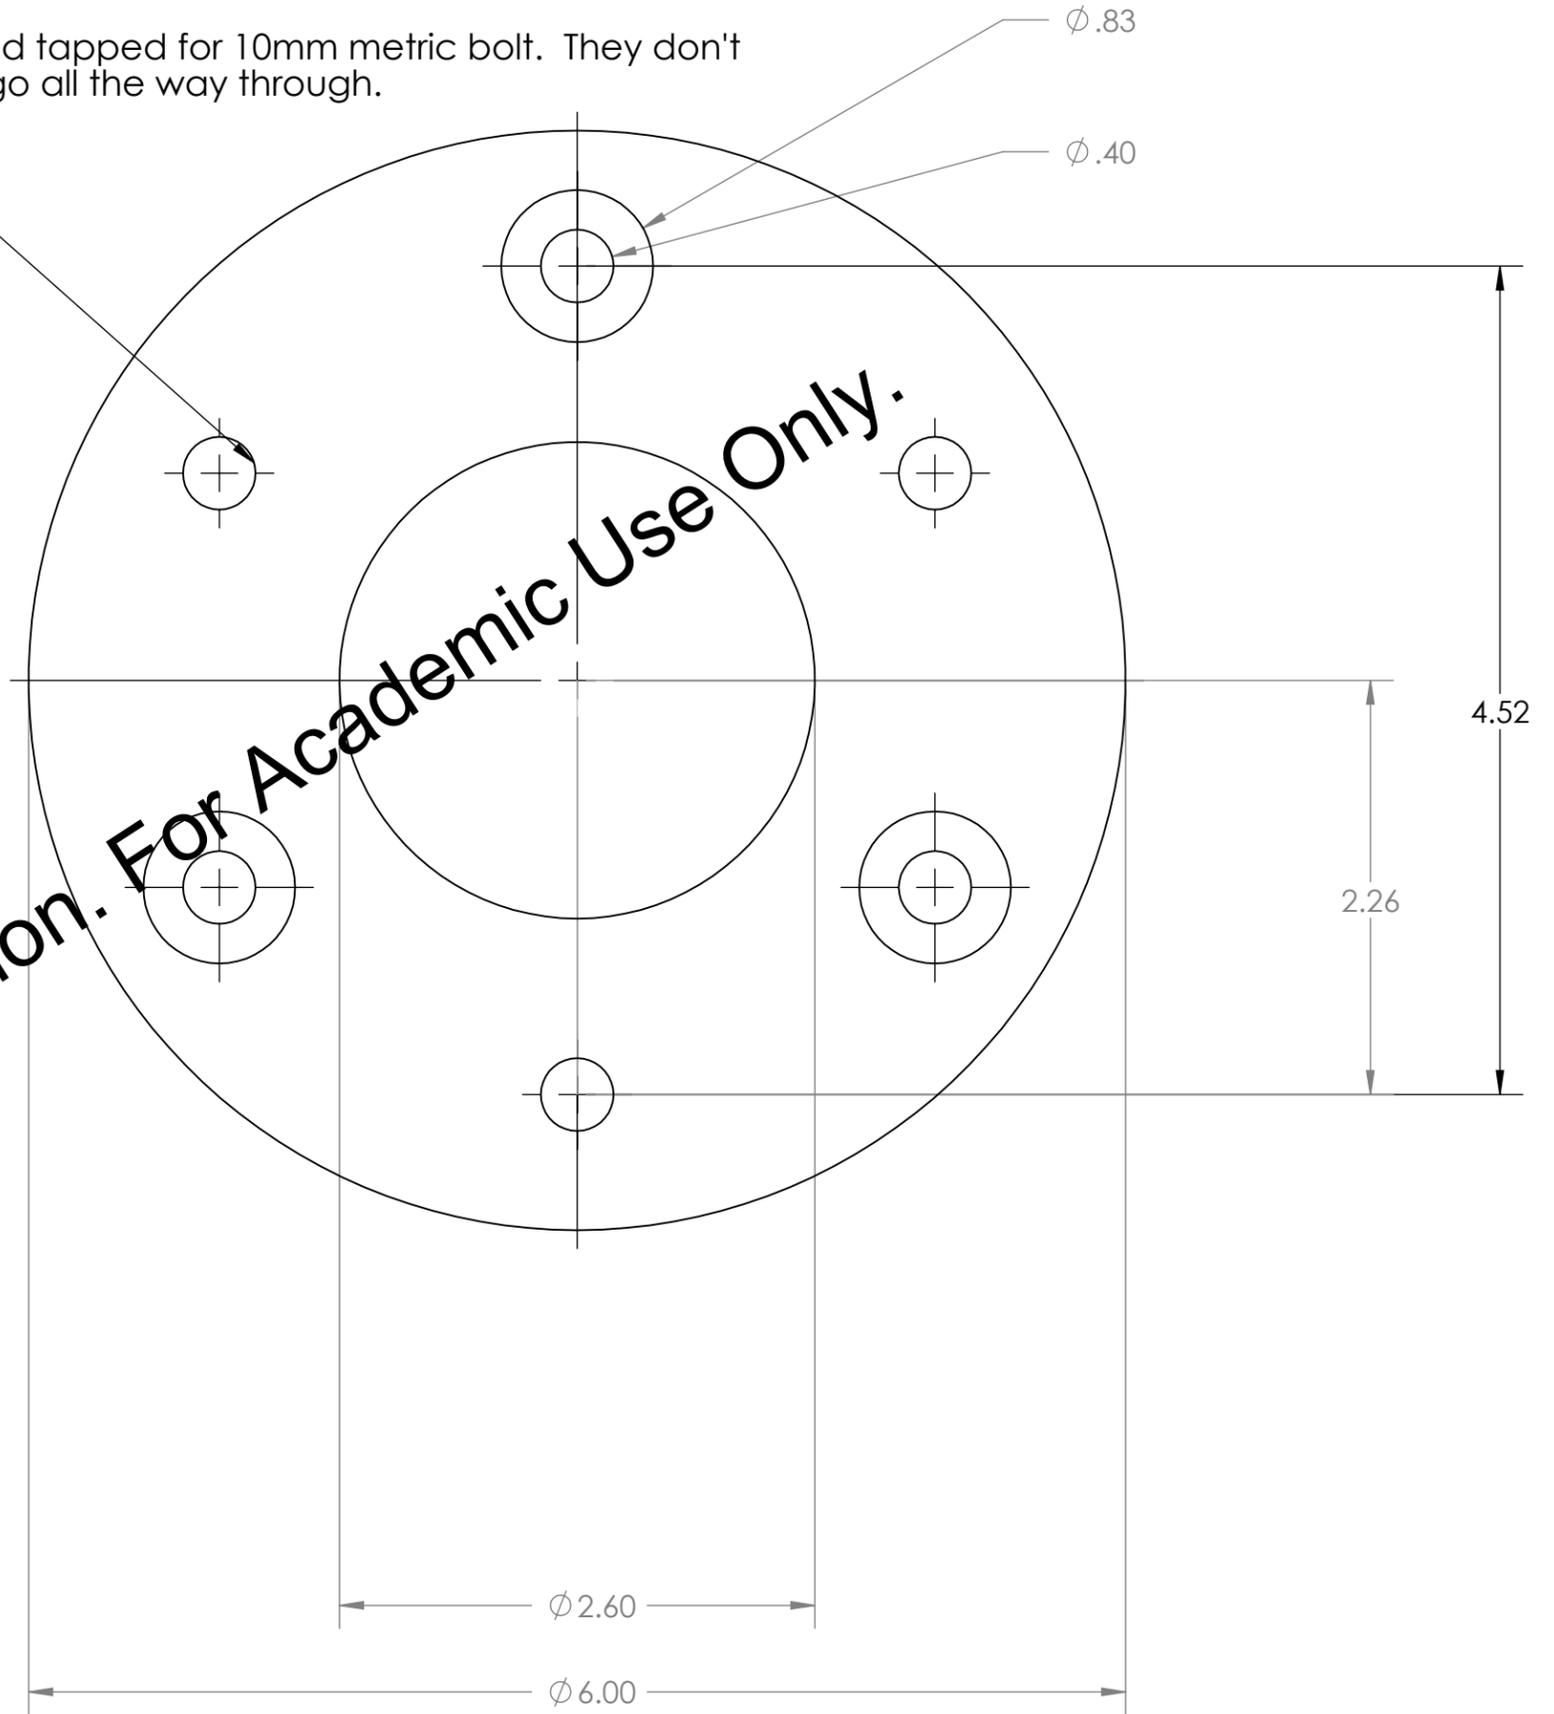

Used a 2.26 x 6 hole drilling program with mill zero'd at center of spacer.

**SolidWorks Student Edition. For Academic Use Only.**